Mail Chime™

How It Works

When the mailbox door is opened, the Receiver in the house will buzz four times and display a red LED light. After you retrieve your mail, press the reset button to reset.

Package Contents

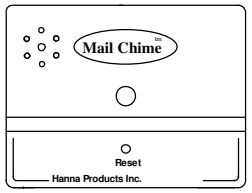

Receiver

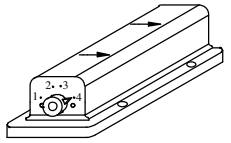

Transmitter

battery

12 volt, A23 battery

Battery can be purchased at most drug stores and battery stores.

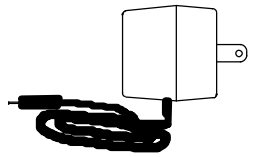

AC adaptor

---

1. Remove top case by removing four screws.

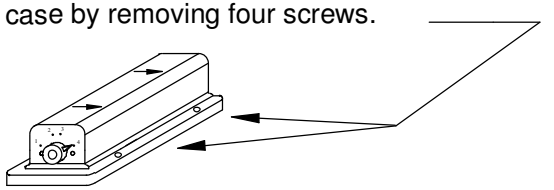

2. Place the battery into the battery holder. Be sure the positive end is towards the knob at the end of the case.

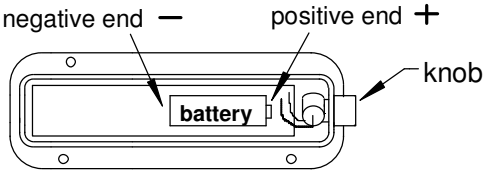

3. Reassemble the case using the 4 screws.

4. Refer to page 2 and set the dial setting for your type of mailbox.

5. Peel the protective cover off the double faced tape on the bottom of the Transmitter and attach the Transmitter to your mailbox door. Note the direction of the arrows.